

EXTENDABLE CURTAIN TRACK

FITTING GUIDE


What you will need



Child Safety

Young children can be strangled by loops in pull cords that operate the product. To avoid strangulation and entanglement keep cords out of the reach of young children.


Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

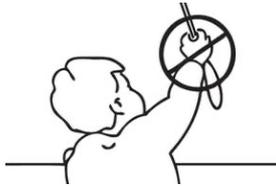

Safety Devices


This product has been supplied with a Tension Pulley, to make this product safe in line with the child safety regulations outlined in BS EN13120.

 Please note it is a requirement in accordance with BS EN 13120 to install the Tensioner and the installer is liable to ensure child safety.




WARNING

Children can strangle if this safety device is not installed. Always use this device to keep cords out of reach of children.

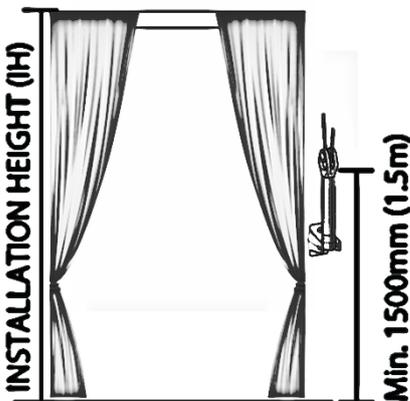


Extendable Curtain Track

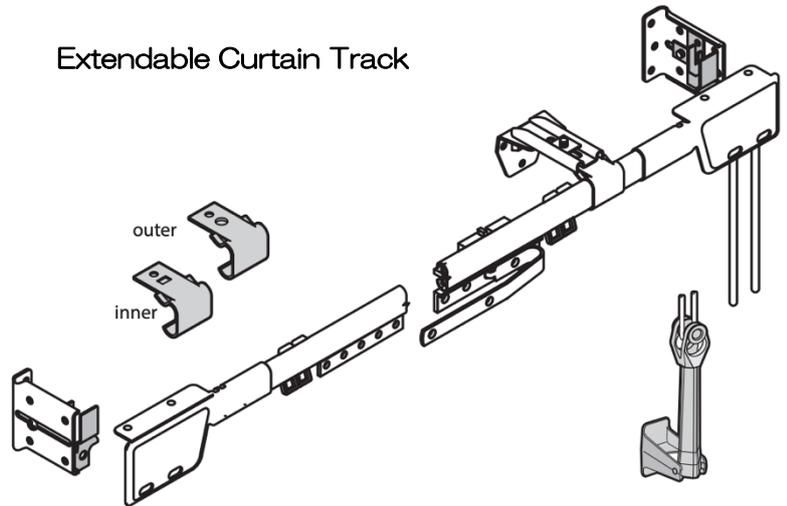

STEP 1



Carefully remove all the packaging, taking care not to damage the track. Decided the location of the rail and mark out the position of the fixing line, 10cm above the window recess and allow 15cm either side for the curtains to stack back.

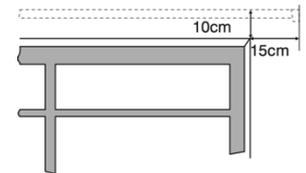

The track is adjusted in length by sliding the inner track into or out of the outer track.


STEP 2

Take a rail end bracket, undo the small screw and separate the two parts. This will make it easier to reach the screws to fix them to the batten or wall.

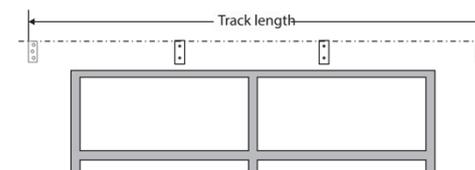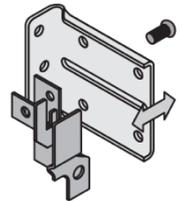


STEP 3

Holding the bracket up to the fixing line, mark off the holes for the screws with a pencil. If you are mounting on to a batten drill a 2mm diameter hole in the batten to a depth of 30mm. Use a spirit level to ensure the holes are straight. Repeat on the other side of the window.

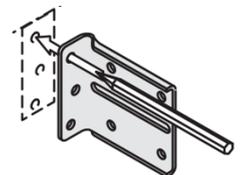

STEP 4

Once you have marked the position of the brackets drill holes and use the appropriate wall plugs and screws to fix the brackets.

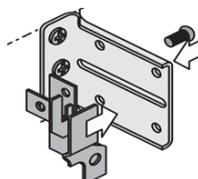


STEP 5

Reassemble the rail end bracket, ensure that the small screw is securely fixed.

STEP 6

Extend the track to the approximate required length and slot into the end brackets. You can adjust the position of the track relative to the wall by loosening the small locking screws in the end brackets and then pulling the track out to suit.


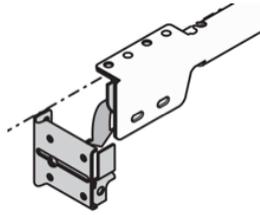


STEP 7

If you extend the curtain track horizontally by more than 300mm, you should use one or more intermediate support brackets.

If you use one support bracket, position it at the midpoint of the window. If you use more than one bracket, space evenly along the track. Mark the position of the brackets, then remove the.

Position the support bracket(s) and mark off the holes for the screws with a pencil. Once you have marked the position of the brackets, drill holes and using the appropriate wall plugs fix the brackets securely.

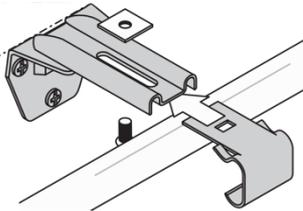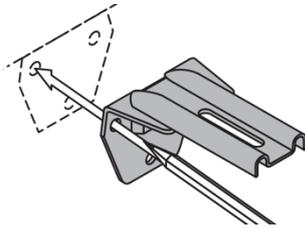


STEP 8

Re-fit the track onto the rail end brackets. Fit the intermediate support brackets clips on to the track. Use the appropriate clip for the inner and outer rails (the outer has 2 circles & the inner has a circle and square hole).

STEP 9


The Master Slide arms have four position options and you can choose which side to have the curtain overlap. Remove the small locking screw from the Master slide overlap and reposition the arm as required.

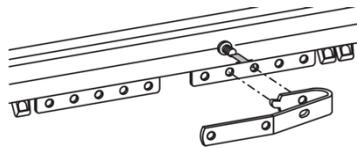


STEP 10

Ensure that both slides are in the fully open position.

Pull the outer draw cord to move the overlap Master Slide to its end of the track. Hold both cords taut and move the unknotted Master Slide by hand to its end of the track.

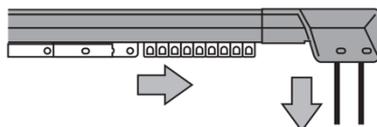

Pull the outside cord to tighten the loop. Check to ensure the Master Slides are still at the ends and adjust again if necessary. Lock the cord over the peg as shown below.

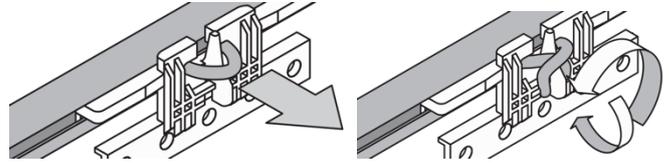


STEP 11


Go to the Master Slide with the knotted cord ends and pull down on the right-hand knot to reduce the cord loop. To prevent the risk of child strangulation the cord loop must be 1m maximum from the rail and a minimum of 1.5m above the floor; the tension pulley must be fitted.

Using the two screws supplied, fix the tension pulley at the correct height, directly in line with the pull cord.

Extend the neck of the pulley and secure in higher position using a pin or a small nail. Remove the central barrel by pulling it down and then out.

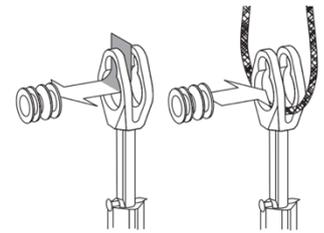

Place the cord inside the pulley and replace the barrel ensuring it clicks into place.


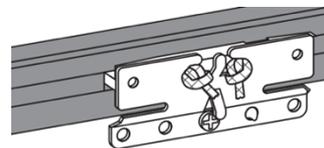


Take up the slack of the cord and tie a knot behind the Master Slide arm.

Remove the pin or nail from the pulley, the cord will now be fully tensioned.

If there is insufficient tension in the cord, reduce the cord length by adjusting the knot behind the Master Slide arm.

Cut the excess cord in front of the knot. Only when you are sure that the cord length and tension are correct

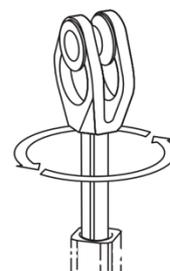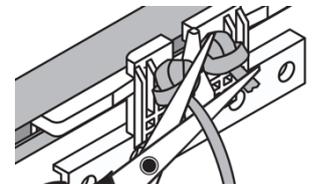

If the cord becomes twisted, simply rotate the head of the pulley to untwist it

The track is now ready to accept curtains.