

ROLLER BLINDS


FITTING GUIDE

What you will need



Child Safety

Young children can be strangled by loops in chains that operate the product. To avoid strangulation and entanglement keep chains out of the reach of young children. Cords may become wrapped around a child's neck. Move beds, cots and furniture away from windows and chains. Do not tie chains together. Make sure chains do not twist and create a loop.

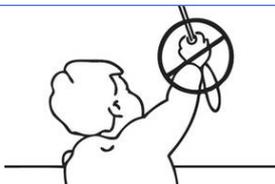


Safety Devices

This product has been supplied with a P-Clip chain tensioner. This component has been supplied to make this blind safe in line with the new child safety regulations outlined in BS EN13120.




Fitting The P-Clip

The safety P-Clip needs to be installed as close as possible to the roller blind and in all cases not less than 1500mm from the floor.

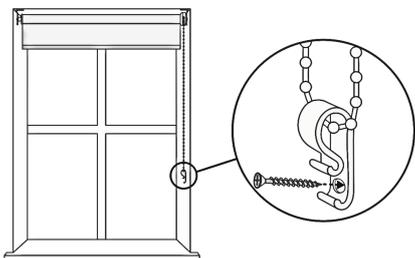

The P-Clip chain tensioner must be fitted at the maximum distance possible from the control mechanism to prevent the chain loop from becoming slack. With the chain inside the P-Clip, position it on the wall making sure the chain is taut yet still able to move freely. Mark the screw hole(s) with a pencil and attach it to the wall with the fixings provided. Please note it is a requirement in accordance with BS EN 13120 to install the P-Clip and the installer is liable to ensure child safety.

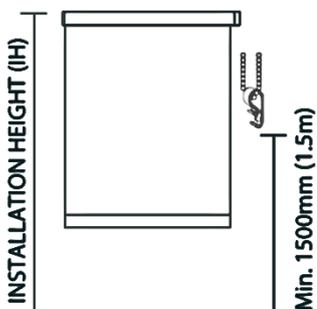

WARNING

Children can strangle if this safety device is not installed. Always use this device to chains out of reach of children.

Roller Blind System

Preparation

Confirm the location of the brackets on the window, options are: Top fix, Face fix, or Side Fix as shown below. When positioning the brackets inside the window recess, make sure to allow for any obstructions such as window handles etc.



Face Fix



Top Fix



Side Fix

Fitting the Blind

STEP 1

Install brackets firmly into place, use raw plugs where necessary to ensure brackets are secure.


STEP 2

Holding the blind, locate the pin end into the central round hole of the corresponding bracket and push it in all the way.



STEP 3

With the pin end now in position, lift the control end and insert it into the opposite bracket.

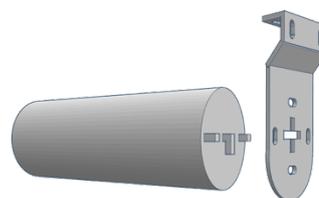

Ensure the lugs click into their corresponding slots. Make sure the centre lug is in the vertical position.