

SG 3000/3900 CURTAIN TRACK

FITTING GUIDE


What you will need



Child Safety

Young children can be strangled by loops in pull cords that operate the product. To avoid strangulation and entanglement keep cords out of the reach of young children.



Cords may become wrapped around a child's neck. Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

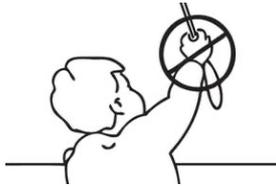

Safety Devices

This product has been supplied with a Safety Cord Retainer. to make this product safe in line with the child safety regulations outlined in BS EN13120.

Please note it is a requirement in accordance with BS EN 13120 to install the Tensioner and the installer is liable to ensure child safety.

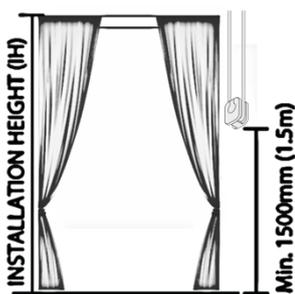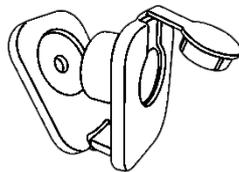

WARNING

Children can strangle if this safety device is not installed. Always use this device to keep cords out of reach of children.

How to shorten the curtain track

If it is necessary to shorten the curtain track, follow all instructions (1-8 overleaf) for pair stacking.

For single stacking follow steps 1, 2, 4, 5, 6 & 7 only.


To adjust the point where the curtains meet, follow steps 3 and 8 only.

If cord drop is required at opposite ends to that supplied, simply follow step 3, pull cord through and the follow step 8.

Installation of SG3000/3900

STEP 1


Mark out the bracket positions.

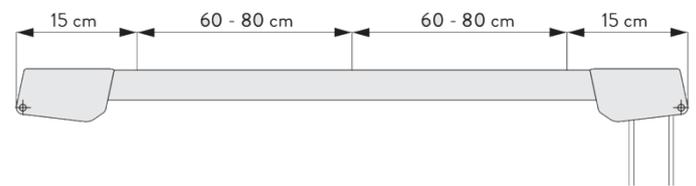

The fixing distances above are meant as a guide only, they may vary depending on the width of track and curtain weight.

STEP 2

Confirm the location of the brackets on the window, options are: Face fix, or Top fix as shown below. When positioning the brackets inside the window recess, make sure to allow for any obstructions such as window handles etc.

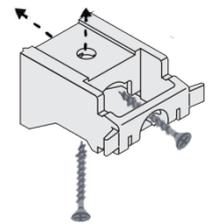


Firmly screw the brackets to wall or ceiling.

The two outside brackets should be located 12.5cm (5") in from the ends of the track to provide stability. The remaining brackets should be equally spaced along track (approx. every 60cm/2').


STEP 3

To install the track simply locate as shown and press onto the brackets in the direction indicated.

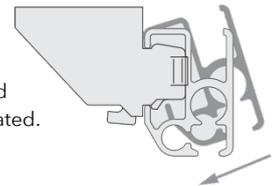

STEP 4


It is often desirable when the track is wall-fixed to make an extra fixing point over the end where the cord is pulled to give greater rigidity. A special tubular spacer and 11/2" No. 8 screw are supplied with all systems.

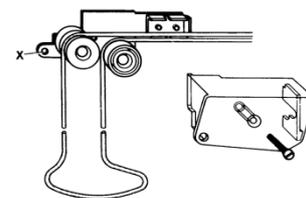

Unscrew the nylon cover. Drill a hole in the wall directly behind 'X', insert screw through hole and spacer and screw firmly into position. Then replace the nylon cover.

STEP 5

Install the child safety cord retainer at least 1.5m from the floor and in line with the end pulley.

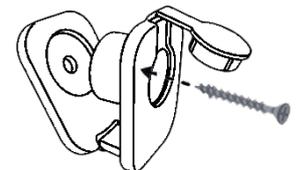


To fit the retainer, mark the position on the wall and then drill a hole. Make sure the retainer is open and place the cord round the centre part.

Close the retainer making sure the cord runs freely. Then use the screw to fasten the retainer to the wall.

Finally close the screw cap cover.

Where the track is slotted to allow insertion of extra gliders without removing end pieces, remove springstops and insert gliders equally at each side, replace springstops.

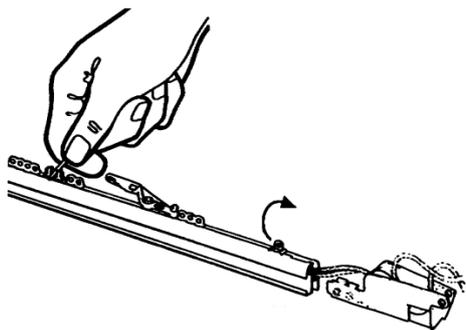


1. Place track face down on bench or floor and operate to take gliders to centre.

2. Slacken screws and pull end piece free.

3. Carefully prise out cord retaining pin from visible pilot runner.

4. Measure amount to be trimmed off exposed end of track and mark. Where the track is slotted the slot will no longer be usable. Discard springstops.

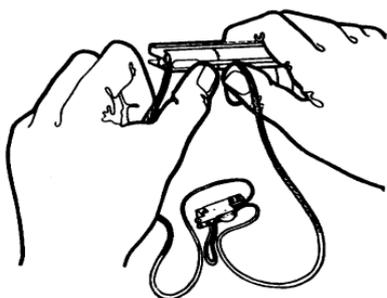

5. Pull cords through into glider channel and clear of cutting point.

6. Cut track squarely with junior hacksaw and carefully de-burr with sharp knife or small file, paying particular attention to ends of cord channels.

7. Pull cords back into cord channels and check that they operate freely - replace end piece.

8. Move both pilot runners to the extreme ends of the track (i.e. in a fully open position) - hold cords in tension and press fully home cord retaining pin into pilot runner.

(The pin must go through cord and if inserted correctly a 'click' will be heard.)

Two gliders plus overlap or, if no overlap fitted, four gliders should remain between pilot runners.